

30 SERIES PORTABLE FLUORESCENT WORK LIGHT


Relamping Instructions



WARNING

WEAR HAND AND EYE PROTECTION
DISCONNECT POWER SOURCE

1. Remove wire/cable tie from end cap located opposite handle.
2. Remove end cap from outer tube by gently prying off tube with a screwdriver or similar tool.
3. Notice the white electrical cord protruding from shock. Gently push 2.5" of this cord back through shock.
4. Gently remove shock by pulling it straight out of the outer tube. Use caution as bulb may remain attached to shock. If so, carefully pull bulb loose.
5. Carefully remove bulb from tube and dispose of bulb properly.
6. Insert new bulb so the bottom bulb pin inserts fully into base of shock.
7. Insert shock into outer tube so the top bulb pins insert fully into receptacles of shock.
8. Gently pull white electrical cord through shock to remove slack.
9. Replace end cap, making certain cap is fully seated in groove of tube. Secure with a 150-lb. minimum cable/wire tie.
10. Visually inspect light to ensure bulb is fully engaged prior to testing.

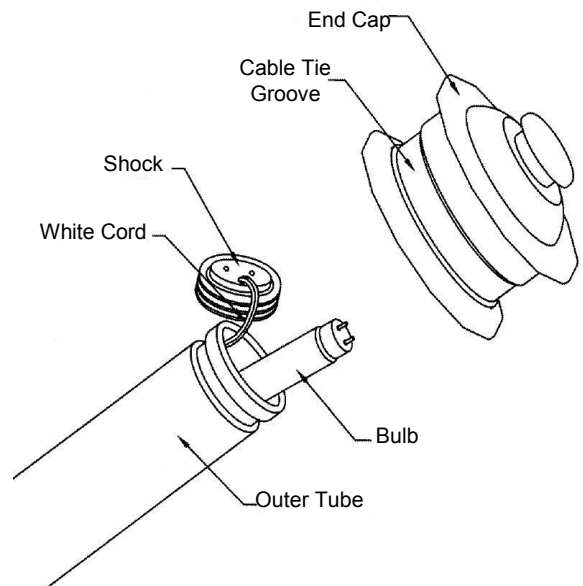

800.346.1956

www.jamesoncorp.com